Evolution EV2/X2 Multi-Surface Cleaner & Degreaser

2-in-1 action - cleaning & degreasing.

Its fragrance-free formulation makes it ideal for use in food preparation areas.

Easily removes dirt and grease from hard surfaces.

A highly concentrated and economical hard surface cleaner and degreaser. Its highly effective formulation allows for easy cleaning of most non-porous hard surfaces, including stainless steel worktops, exterior areas of kitchen equipment, canopy hoods, hobs, sinks and floors. Ideal for use via a trigger spray or mop application. Helping to remove surface grease and grime with ease, leaving no scent behind, making it suitable for use in food preparation areas.

Directions for use

For professional use only.

- 1. Always test on an inconspicuous area prior to use.
- 2. For heavily soiled, horizontal surfaces, spray the product directly onto the surface to be cleaned.
- 3. Leave the product to sit for 1-2 minutes, before wiping away with a clean, damp cloth or paper towel
- 4. For lighter soiling/vertical surfaces, spray the product directly onto the cloth before wiping the surface to be cleaned.

Replacing the 325ml cartridges:

- 1. Insert the cartridge of the concentrate into the rear of the X2 trigger by pushing it straight up. Turn the locking lever into place.
- 2. Take the empty water cartridge and fill with clean, fresh water.
- 3. Line the water cartridge up with the grooves in the concentrate cartridge and push up into the front part of the trigger, Turn the locking lever into place.





4 x 325ml | EV2/X2



1 x 325ml | EV/X2START

Product Info

Colour: **Yellow**Fragrance: **None**pH: **9 - 10**

Shelf Life: 24 Months

